

# CONTENTS

Click on a topic to view its contents.

<b>APRS</b>	<b>1</b>
ABOUT APRS .....	1
APRS STATION CONFIGURATION .....	2
The APRS Program .....	4
GPS Receivers .....	6
TNC .....	8
Transceivers .....	8
Networks .....	9
Mic Encoder™ .....	11
USING THE TH-D7 AS A SIMPLE APRS STATION .....	12
Setting Your Call Sign .....	12
Setting Your Position .....	13
Selecting a Position Comment .....	13
Entering Status Text .....	14
Selecting Your Station Icon .....	14
Setting the Transmit Method .....	19
Setting the Digipeater Path (Digipath) .....	20
Unprotocol Setting .....	21
How to Receive APRS Data on the TH-D7 .....	23
How to Read the Received Stations Data .....	25
MESSAGES .....	31
Entering a Message .....	32
Transmitting a Message .....	33
Receiving a Message .....	34
Reading a Message .....	35
USING THE TH-D7 WITH A GPS RECEIVER .....	38
Enhancement .....	38
Making the Cable .....	38
Receiving GPS Data .....	39
Waypoint Data Output .....	40
USING THE TH-D7 WITH A PERSONAL COMPUTER (AND GPS) .....	41
System Configuration .....	41
TH-D7 Setup .....	41

Click on a topic to view its contents.

APRS Program Setup ..... 42

REFERENCE MATERIALS ..... 44

    References ..... 44

    Web Sites ..... 44

**PACKET COMMUNICATION 45**

CONNECTION AND SETUP ..... 46

    Setting Up the TH-D7 ..... 46

    Setting Up the PC ..... 47

TNC CONFIGURATION AND SPECIFICATIONS ..... 47

    Configuration ..... 47

    Specifications ..... 48

PRECAUTIONS AND RESTRICTIONS FOR  
PACKET OPERATIONS ..... 49

TNC OPERATION MODES ..... 50

TNC STATUS DISPLAY AND COMMANDS ..... 51

COMMANDS ..... 52

COMMAND DESCRIPTIONS (BY USAGE) ..... 58

    TNC to PC ..... 58

    Communication Commands ..... 60

AX.25 PROTOCOL ..... 81

PACKET COMMUNICATION SYSTEMS ..... 83

REFERENCE MATERIALS ..... 86

    References ..... 86

    Web Sites ..... 86

**GPS 87**

ABOUT GPS ..... 87

COMPATIBLE GPS RECEIVERS ..... 87

    Basic Requirements ..... 87

    GPS Sentences ..... 88

**SSTV 95**

OUTLINE OF SSTV ..... 95

Click on a topic to view its contents.

Software SSTV .....	95
New Hardware .....	95
<b>TRANSMISSION METHODS .....</b>	<b>96</b>
Robot C36 .....	98
Fast FM Mode .....	100
TH-D7 Fast FM Mode and Voice .....	102
<b>RSV REPORT .....</b>	<b>104</b>
<b>VC-H1 CONTROL .....</b>	<b>105</b>
Superimposing .....	105
Setting the Transmission Mode .....	105
VC Shutter .....	105
PG-4V Connection Chart .....	106
<b>REFERENCE MATERIALS .....</b>	<b>107</b>
References .....	107
Web Sites .....	107

**SKY COMMAND II \_\_\_\_\_ 108**

<b>RECOMMENDED SETUP .....</b>	<b>109</b>
Before Connecting the Transceivers .....	109
Connecting the Transceivers .....	109
Transporter and Commander Setup .....	110
Send/Receive Check .....	111
On Air .....	111
<b>NOTICE AND RESTRICTIONS ON ACTUAL USE .....</b>	<b>112</b>
Frequencies .....	112
Tone Frequency .....	112
HF Band Transmission Output .....	112
CW Mode .....	112
HF Band Transmission Frequency .....	112

**PC COMMANDS \_\_\_\_\_ 113**

<b>ABOUT PC COMMANDS .....</b>	<b>113</b>
<b>COMMAND STRUCTURE .....</b>	<b>114</b>
<b>COMMAND TYPES .....</b>	<b>115</b>

Click on a topic to view its contents.

ALPHANUMERIC COMMANDS .....	116
COMMAND COMMENTS .....	122
CHARACTER LISTS .....	179

**TIPS** \_\_\_\_\_ **180**

RECOMMENDED BATTERY SAVER SETUP .....	180
WHEN YOU ARE WORRIED ABOUT THE BATTERY LIFE .....	180
HINTS ON ENTERING TEXT .....	180
THE BEEP TONES WHEN APRS DATA IS RECEIVED IS IRRITATING .....	180
THE BEST APRS DATA TRANSMISSION INTERVAL TIME .....	181
DOES NOT TRANSMIT APRS DATA AUTOMATICALLY .....	181
APRS DATA IS TRANSMITTED DURING VOICE COMMUNICATION .....	181

**COPYRIGHTS** \_\_\_\_\_ **182**